



Taster-Modul Basic

Gebrauchsanleitung







Taster-Modul Basic, 1fach Art.-Nr. MEG5110-0300

System M



Taster-Modul Basic, 2fach Art.-Nr. MEG5120-0300

English operating instructions



You will find the English version of these operating instructions at: www merten com

Notwendiges Zubehör

- Komplettieren Sie das Taster-Modul Basic, 1fach und 2fach mit:
- entsprechenden Finsätzen (siehe Funktionsübersicht)
- entsprechenden 1fach-, bzw. 2fach-Wippen im Design System M
- Rahmen im Design System M

Für Ihre Sicherheit



GEFAHR

Gefahr von schweren Sach- und Personenschäden, z. B. durch Brand oder elektrischen Schlag, aufgrund einer unsachgemäßen Elektroinstallation.

> Eine sichere Elektroinstallation kann nur gewährleistet werden, wenn die handelnde Person nachweislich über Grundkenntnisse auf folgenden Gebieten verfügt:

- · Anschluss an Installationsnetze
- Verbindung mehrerer elektrischer Geräte
- · Verlegung von Elektroleitungen

Über diese Kenntnisse und Erfahrungen verfügen in der Regel nur ausgebildete Fachkräfte im Bereich der Elektro-Installationstechnik. Bei Nichterfüllung dieser Mindestanforderungen oder Missachtung droht für Sie die persönliche Haftung bei Sach- und Personenschäden.

Taster-Modul kennenlernen

Mit dem Taster-Modul Basic (im Folgenden Modul genannt) können Sie verschiedene Funktionen ausführen, wie z. B.:

- · Schalten, Dimmen, Jalousie steuern
- · Lichtszenen und Jalousieszenen Basic aufrufen, ändern und speichern.

Funktionsübersicht der Module auf empfangenden Einsätzen

Komplettieren Sie das Modul mit den empfangenden Einsätzen zum Schalten. Dimmen oder Jalousie/Rollladen steuern, um lokale Licht- und Jalousiesteuerung auszuführen

Schalten:

•	Elektronik-Schalt-Ein-
	satz
	Poloio Cobalt Finanta

Taster-Modul, 1fach: lokal schalten

Relais-Schalt-Einsatz

Taster-Modul, 2fach: lokal schalten, lokale Lichtszenen aufrufen und spei-Taster-Modul, 1fach:

· Elektronik-Schalt-Einsatz 2fach

lokal heide Kanäle gleichzeitig schalten · Relais-Schalt-Einsatz.

Taster-Modul 2fach:

lokal beide Kanäle separat schalten

Dimmen:

2fach

•	Universal-Dimmer-Eir
	satz

Taster-Modul, 1fach: lokal schalten und dimmen

Steuerungs-Einsatz 1-10 V

Taster-Modul, 2fach: lokal schalten und dim-· DALI-Steuerungs-Einmen lokale Lichtszenen

• Universal-Dimmer-Einsatz 2fach

aufrufen und speichern Taster-Modul, 1fach: lokal heide Kanäle gleichzeitig dimmen

Taster-Modul, 2fach: lokal heide Kanäle senarat dimmen

Jalousien/Rollladen steuern:

• Jalousiesteuerungs-Ein- Taster-Modul, 1fach: satz

lokal hoch-/runterfahren

Taster-Modul, 2fach:

lokal hoch-/runterfahren lokale Jalousieszenen Basic aufrufen und speichern (vollständig hoch/runter, keine beliebige Position)

Funktionsübersicht der Module auf sendendem Einsatz

Komplettieren Sie das Modul mit dem sendenden Zentralstellen-Einsatz, um globale Licht- und Jalousiesteuerung über den PlusLink (PL) auszuführen.

Globale Licht- und Jalousiesteuerung:

• Zentralstellen-Einsatz Taster-Modul, 1fach:


global schalten, global dimmen, global hoch-/runterfahren

Taster-Modul, 2fach:

global schalten, global dimmen, global hoch-/runterfahren, globale Licht-/ Jalousieszenen aufrufen und speichern

Anschlüsse, Anzeigen und Bedienelemente


Vorderseite:



LEDs (Status, Orientierung)


1 - 2 Tasten des Taster-Moduls, 1fach 1 - 4 Tasten des Taster-Moduls, 2fach

Rückseite:

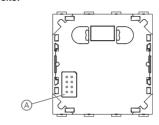

(A) Modul-Schnittstelle

Modul montieren

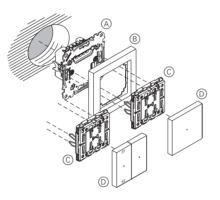

- (A) Einsatz (siehe Funktionsübersicht)
- (B) Rahmen
- © Taster-Modul, 1fach/2fach
- D Wippen, 1fach/2fach

Modul bedienen: Lokale Licht- und Jalousiesteuerung

Die Bedienung des Moduls wird stellvertretend am Beispiel des 2fach-Taster-Moduls gezeigt.

Im Folgenden wird "Jalousie/Rollladen" nur mit ..Jalousie" bezeichnet.


Verbraucher ein-/ausschalten

In Kombination mit 1fach-Einsatz



In Kombination mit 2fach-Einsatz

- rechte Taste: Kanal 1
- linke Taste: Kanal 2



Bei Verwendung des 1fach-Taster-Moduls werden beide Kanäle gleichzeitig geschaltet.


Verbraucher dimmen

In Kombination mit 1fach-Einsatz



In Kombination mit 2fach-Einsatz


- rechte Taste: Kanal 1
- linke Taste: Kanal 2



Bei Verwendung des 1fach-Taster-Moduls werden beide Kanäle gleichzeitig gedimmt.

Jalousien steuern

- hoch-/runterfahren (> 0,5 s)
- schrittweise auf/ab (< 0,5 s)

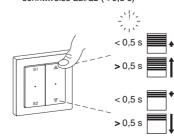


Lokale Licht- oder Jalousieszene aufrufen

(Nur für Taster-Modul, 2fach)

Standard-Szenen

Ab Werk verfügen alle Geräte über Voreinstellungen für eine Licht- bzw. Jalousieszene.

S1: Licht an (100 %) / Jalousie hoch S2: Licht aus / Jalousie runter



- (1) Szene aufrufen: Taste S1 oder S2 kurz drücken.
- Die Geräte der Lichtszene nehmen den gespeicherten Helligkeitswert an
- Die Geräte der Jalousieszene fahren zunächst in die obere Position. Nach einer Laufzeit von 2 Minuten fahren sie in die gespeicherte Position.

Lokale Lichtszenen ändern und speichern

(Nur für Taster-Modul, 2fach)

(1) Szene aufrufen: Taste S1 oder S2 kurz drücken.




- (2) Helligkeitswert einstellen.
- 3 Szene speichern: Taste S1 oder S2 lang drücken. Bei erfolgreicher Speicherung schalten sich alle Lampen kurz aus und wieder ein. Danach nehmen die Lampen den gespeicherten Helligkeitswert an.

Lokale Jalousieszenen Basic ändern und speichern

(Nur für Taster-Modul, 2fach)

Bei Jalousieszenen Basic können Sie nur die festen Positionswerte "vollständig hoch/runter" speichern

1 Jalousie in die obere Position fahren und 2 Minuten Laufzeit abwarten bis die Status-LED erlischt.



- 2 Gewünschte Position der Jalousie einstellen:
- Position "hoch": keine weitere Einstellung nötig
- Position "runter": Jalousie runterfahren
- ③ Szene speichern: Taste S1 oder S2 lang drücken. Bei erfolgreicher Speicherung fahren die Jalousien einen Schritt ab und wieder auf

Schalten, Dimmen, Jalousie steuern, Szenen aufrufen mechanischem Taster/Doppeltaster

PlusLink steuern mit

Modul von anderer Stelle steuern

Verbraucher von anderer Stelle über

• Zentralstellen-Einsatz oder Nebenstelle Plus, 1fach/

Modul bedienen: Globale Licht- und Jalousiesteuerung über PlusLink




Die globale Steuerung über PlusLink ist möglich in Kombination von Zentralstellen-Einsatz und Taster-Modul.

Globale Lichtsteuerung

Beispiel für globales Ein-/Ausschalten und Dimmen von 1-4 PL-Linien

Bei Betätigung des Taster-Moduls auf dem Zentralstellen-Einsatz werden alle Verbraucher in den PL-Linien gemeinsam gesteuert:

- kurzer Tastendruck (< 0,5 s): ein-/ausschalten
- langer Tastendruck (> 0,5 s): dimmen

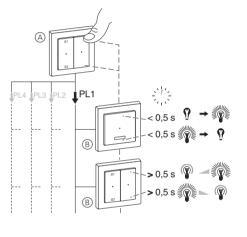


- (A) Modul auf Zentralstellen-Finsatz
- (B) Einsätze zum Schalten und Dimmen (siehe Funktionsübersicht)

Globale Jalousiesteuerung

Beispiel für globales Hoch-/Runterfahren und schrittweises Auf/Ab von 1-4 PL-Linien

Bei Betätigung des Taster-Moduls auf dem Zentralstellen-Einsatz werden alle Verbraucher in den PL-Linien gemeinsam gesteuert:

- langer Tastendruck (> 0,5 s): hoch-/runterfahren
- kurzer Tastendruck (< 0,5 s): schrittweise auf/ab

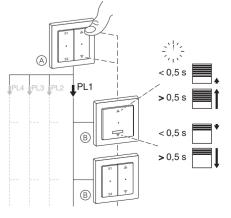

- (A) Modul auf Zentralstellen-Einsatz
- B Jalousiesteuerungs-Einsatz

Modul bedienen: Globale Szenen über PlusLink aufrufen, ändern und speichern



Globale Szenen über PlusLink sind möglich in Globale Szenen uper riusenin sanza und Kombination von Zentralstellen-Einsatz und Taster-Modul, 2fach.



Wenn Sie eine Szene speichern, dann betrifft das alle angeschlossenen Geräte der PL-Linien.

Um eine Szene nach Ihren Wünschen zu ändern und zu speichern, gehen Sie folgendermaßen vor:

- (1) Szene aufrufen (schon ab Werk sind Standard-Szenen eingestellt)
- 2 Zustände einzelner Geräte in der Licht- bzw. Jalousieszene verändern.
- (3) Prüfen, ob sich alle Geräte im gewünschten Zustand
- 4 Szene speichern.


Globale Licht- oder Jalousieszenen aufrufen

Standard-Szenen

Ab Werk verfügen alle Geräte über Voreinstellungen für eine Licht- bzw. Jalousieszene.

Licht an (100 %) / Jalousie hoch Licht aus / Jalousie runter Paniktaster: Licht an (100 %) / Jalousie runter


- (1) Szene aufrufen: Taste S1 oder S2 kurz drücken.
- Die Geräte der Lichtszene nehmen den gespeicherten Helligkeitswert an.
- Die Geräte der Jalousieszene fahren zuerst in die oberste Position. Nach Ablauf einer Laufzeit von maximal 2 Minuten fahren die Jalousien in die gespeicherte Position.

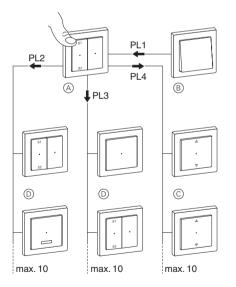

- (A) Modul auf Zentralstellen-Einsatz
- Paniktaster (mechanischer Taster)
- © PL-Linie 4 mit Jalousieszene: Jalousiesteuerungs-Einsatz
- D PL-Linie 2 und 3 mit Lichtszene: Einsätze zum Schalten und Dimmen (siehe Funktionsübersicht)
- Präsenzmelder in den PL-Linien rufen keine Szenen auf, sondern schalten Verbraucher für 24 Stunden ein oder aus (S1/S2).

Lichtszenen ändern und speichern

Am Beispiel eines Dimmers:







- (1) Szene aufrufen: Taste S1 oder S2 kurz drücken.
- 2 Helligkeitswerte der Lampen, die Sie verändern möchten, am empfangenden Gerät einstellen.
- ③ Szene speichern: Taste S1 oder S2 lang drücken. Bei erfolgreicher Speicherung schalten sich alle Lampen kurz aus und wieder ein. Danach nehmen die Lampen den gespeicherten Helligkeitswert an.

Jalousieszenen ändern und speichern

Bei Jalousieszenen können Sie in Kombination mit dem Taster-Modul Basic auf dem empfangenden Einsatz nur die festen Positionswerte "vollständig hoch/runter" ((2)(A)) speichern.

In Kombination mit den Taster-Modulen Comfort und Comfort Plus auf dem empfangenden Einsatz können Sie beliebige Positionswerte (2B) speichern.





- ① Szene aufrufen: Taste S1 oder S2 kurz drücken.
- 2 A Positionen (vollständig hoch/runter) der Jalousien, die Sie verändern möchten, am empfangenden Gerät einstellen.
- ® Positionen (beliebige Werte) der Jalousien, die Sie verändern möchten, am empfangenden Gerät einstellen.
- ③ Szene speichern: Taste S1 oder S2 lang drücken.

Bei erfolgreicher Speicherung fahren die Jalousien einen Schritt ab und wieder auf

Modul bedienen: Basisfunktionen

Status-LED (rot) des Moduls

In Kombination mit 1fach-Einsatz

Bedienung	Rückmeldung
	rote LED leuchtet bei geschalteter Last

In Kombination mit 2fach-Einsatz

Bedienung	Rückmeldung
	rote LED leuchtet bei geschalteter Last

In Kombination mit Zentralstellen-Einsatz

Bedienung	Rückmeldung
\$1	rote LED blinkt 1x bei Betätigung

Orientierungs-LED (grün) ein-/ausschalten

Standard: ausgeschaltet

Bedienung	Rückmeldung
-10x &/ = ©	LED blinkt 4x

Memory-Funktion ein-/ausschalten

(Nur in Kombination mit Dimmer-Einsätzen)

Das Gerät merkt sich die zuletzt eingestellte Helligkeit. Standard: ausgeschaltet

Bedienung	Rückmeldung
6x	LED blinkt 4x

- 1 Memory-Funktion einschalten
- (2) Memory-Funktion ausschalten

Auf Werkseinstellung zurücksetzen

Bedienung	Rückmeldung
-10 s	LEDs blinken 8x

Technische Daten

Anzeigeelemente

Taster-Modul, 1fach: 1 Status-I FD

1 Orientierungs-LED

1 Orientierungs-LED

Taster-Modul, 2fach in Kombination mit

1fach-Einsatz: 1 Status-LED

Taster-Modul, 2fach in

Kombination mit

2fach-Einsatz: 2 Status-LEDs

2 Orientierungs-LEDs

Bedienelemente

Taster-Modul, 1fach: 2 Tasten Taster-Modul. 2fach: 4 Tasten

Anschluss: Modul-Schnittstelle mit

8 Kontaktstiften

Schneider Electric GmbH c/o Merten

Gothaer Straße 29, 40880 Ratingen

www.merten.de

www.merten-austria.at

Kundenbetreuung:

Telefon: +49 2102 - 404 6000





Push-button module Basic

Operating instructions





System M



Push-button module Basic, 1-gang Art. no. MEG5110-0300

System M



Push-button module Basic, 2-gang Art. no. MEG5120-0300

English operating instructions



You will find the English version of these operating instructions at: www merten com

Necessary accessories

- Complete the push-button module Basic, 1-gang and 2-gang, with
- · corresponding inserts (see function overview)
- · corresponding 1-gang or 2-gang rockers in the design System M
- · System M frames.

For your safety



DANGER

Risk of serious damage to property and personal injury, e.g. from fire or electric shock, due to incorrect electrical installation.

> Safe electrical installation can only be ensured if the person in question can prove basic knowledge in the following areas:

- · Connecting to installation networks
- · Connecting several electrical devices
- Laying electric cables

These skills and experience are normally only possessed by skilled professionals who are trained in the field of electrical installation technology. If these minimum requirements are not met or are disregarded in any way, you will be solely liable for any damage to property or personal inju-

Getting to know the push-button

With the push-button module Basic (referred to below as module), you can carry out various functions such as:

- · switching, dimming and controlling blinds
- · retrieving, changing and saving light scenes and blind scenes Basic.

Function overview of the modules on receiving inserts

Complete the module with the receiving inserts for switching, dimming or controlling blind/roller shutter in order to carry out local light and blind control.

Switching:

•	Electronic switch insert	Push-button module,
•		1-gang: locally switching

Push-button module 2-gang: locally switching, retrieving and saving local light scenes Push-button module,

- · Electronic switch insert, 2-gang · Relay switch insert, 2
 - locally switching both channels simultaneously Push-button module, 2-gang:

locally switching both

channels separately

Dimmina:

gang

- 1-10 V insert
- · DALI insert

locally switching and dim-

- Push-button module locally switching and dimming, retrieving and saving
- · Universal dimmer insert, 2-gang

local light scenes Push-button module, locally dimming both channels simultaneously

Push-button module. 1-gang: locally dimming both channels simultaneously

Controlling blinds/roller shutter:

· Blind control insert

Push-button module, 1-gang: locally raising/lowering

Push-button module. 2-gang:

locally raising/lowering, retrieving and saving local blind scenes Basic (completely up/down, not any position)

Function overview of the modules on sending insert

Complete the module with the sending central unit insert in order to carry out global light and blind control via the PlusLink (PL).

Global light and blind control:

Central unit insert


Push-button module, 1-gang:

globally switching, globally dimming, globally raising/ lowering

Push-button module 2-gang:


globally switching, globally dimming, globally raising/ lowering, globally retrieving and saving light/blind

Connections, displays and operating elements




- LEDs (status, orientation)
- 1 2 Push-buttons of the push-button module,
- 1 4 Push-buttons of the push-button module, 2-gang

Rear:

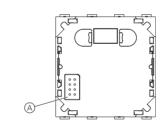

A Module interface

Mounting the module

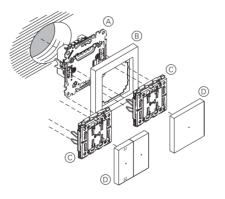

- (A) Insert (see function overview)
- B Frame
- © Push-button module, 1-gang/2-gang
- D Rockers, 1-gang/2-gang

Operating the module: local light and blind control

The operation of the module is illustrated below using the 2-gang push-button module as an example.

The "Blind/roller shutter" will be referred to below as

Switching loads on/off

In combination with 1-gang insert



In combination with 2-gang insert

- · right push-button: channel 1
- left push-button: channel 2



When using the 1-gang push-button module, both channels are switched simultaneously.


Dimming loads

In combination with 1-gang insert



In combination with 2-gang insert


- · right push-button: channel 1
- left push-button: channel 2



When using the 1-gang push-button module, both channels are dimmed simultaneously.

Controlling blinds

- raising/lowering (> 0.5 s)
- up/down in steps (< 0.5 s)

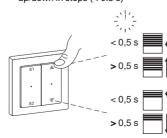


Retrieving local light or blind scenes

(Only for push-button module, 2-gang)

All devices are delivered from the factory with presettings for a light or blind scene.

S1: light on (100 %) / blind up S2: light off / blind down




- ① Retrieve scene: press the S1 or S2 push-button
- . The devices of the light scene adopt the saved brightness value.
- The devices of the blind scene initially move to upper position. After a runtime of 2 minutes they move to the saved position.

Changing and saving local light scenes

(Only for push-button module, 2-gang)

(1) Retrieve scene: press the S1 or S2 key briefly.



- (2) Set the brightness value.
- 3 Save scene: press the S1 or S2 push-button for more than 3 seconds

All lights are switched off briefly and then back on again to indicate that the saving procedure has been successful. Then the lights adopt the saved brightness value.

Changing and saving local blind scenes Basic

(Only for push-button module, 2-gang)

For blind scenes Basic, it is only possible to save the set position values of "completely up/down".

(1) Move the blind to the upper position and wait for the running time of 2 minutes until the status LED goes



- (2) Set the desired position of the blind:
- position "up": no further setting needed
- position "down": lower the blind
- 3 Save scene: press the S1 or S2 push-button for 3 seconds or longer.

The blinds move down a step and then back up to indicate that the saving procedure has been successful.

Controlling the module from another location

Controlling loads from another location

- via PlusLink with • Central unit insert or side controller Plus, 1-gang/2-
- switching, dimming, controlling blinds, retrieving
- mechanical push-button/double push-button

Operating the module: global light and blind control via PlusLink




The global control via PlusLink is possible with the combination of a central unit insert and a push-button module.

Global light control

Example of globally switching on/off and dimming the 1-4 PL lines:

On operation of the push-button module on the central unit insert, all loads in the PL lines are controlled togeth-

- short press on the push-button (< 0.5 s): switching on/
- long press on the push-button (> 0.5 s): dimming

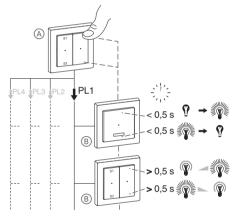


- A Module on central unit insert
- ® Inserts for switching and dimming (see function overview)

Global blind control

Example of global raising/lowering and up/down in steps of the 1-4 PL lines

On operation of the push-button module on the central unit insert, all loads in the PL lines are controlled


- long press on the push-button (> 0.5 s): raising/lowering
- short press on the push-button (< 0.5 s): up/down in

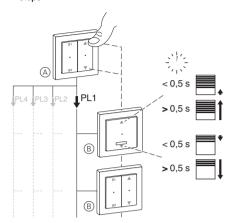

- A Module on central unit insert
- B Blind control insert

Operating the module: retrieving, changing and saving global scenes via PlusLink

Global scenes via PlusLink are possible with the combination of a central unit insert and a pushbutton module, 2-gang.



Proceed as follows to change and save a scene according to your requirements:

- ① Retrieve scene (standard scenes are set at the factory).
- (2) Change the states of individual devices in the light and/or blind scene.
- ③ Check that all devices have the state you require.
- 4 Save scene.


Retrieving global light or blind scenes

Standard scenes

All devices are delivered from the factory with presettings for a light or blind scene.

light on (100 %) / blind up light off / blind down Panic button: light on (100 %) / blind down

- (1) Retrieve scene: press the S1 or S2 key briefly.
- · The devices of the light scene adopt the saved brightness value.
- The devices of the blind scene initially move to the uppermost position. After a running time of maximum 2 minutes has elapsed, the blinds move to the saved po-

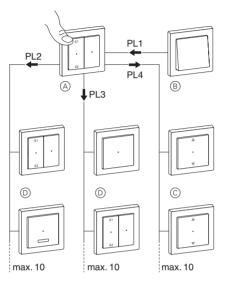


- (A) Module on central unit insert
- B Panic button (mechanical push-button)
- © PL line 4 with blind scene: Blind control insert
- D PL line 2 and 3 with light scene: Inserts for switching and dimming (see function overview)



Presence detectors in the PL lines do not retrieve scenes, but switch loads on or off (S1/S2) for 24

Changing and saving light scenes

Using a dimmer as an example:







- 1 Retrieve scene: press the S1 or S2 key briefly.
- ② Set the brightness values of the lights that you want to change on the receiving device.
- $\ensuremath{\, \big \bigcirc \,}$ Save scene: press the S1 or S2 key for more than 3

All lights are switched off briefly and then back on again to indicate that the saving procedure has been successful. Then the lights adopt the saved brightness value.

Changing and saving blind scenes

In combination with the push-button module Basic on the receiving insert, you can only save the fixed position values of "completely up/down" ((2)(A)) for blind scenes. In combination with the push-button modules Comfort or Comfort Plus on the receiving insert, you can save any position values (2B).





- 1) Retrieve scene: press the S1 or S2 key briefly.
- ② A Set the positions (completely up/down) of the blinds that you want to change on the receiving
- (B) Set the positions (any values) of the blinds that you want to change on the receiving device.
- 3 Save scene: press the S1 or S2 key for more than 3

The blinds move down a step and then back up to indicate that the saving procedure has been successful.

Operating the module: basic functions

Status LED (red) of the module

In combination with 1-gang insert

Operation	Status feedback
	red LED lights up when load is switched on.

In combination with 2-gang insert

Operation	Status feedback
	red LED lights up when load is switched on.

In combination with central unit insert

Operation	Status feedback
\$1	red LED flashes 1x after operation.

Switching the orientation LED (green) on/off

Standard: switched off

Operation	Status feedback
/	LED flashes 4x
-10x &/ = 0	

Switching memory function on/off

(Only in combination with dimmer inserts)


The device memorises the brightness level that was

Standard: switched off

Operation	Status feedback
6x	LED flashes 4x

- (1) Switching on memory function
- (2) Switching off memory function

Resetting to default settings



Technical data

Display elements

Push-button module,

1 status LED 1-gang: 1 orientation LED

Push-button module,

2-gang in combination

with 1-gang insert: 1 status LED 1 orientation LED

Push-button module,

2-gang in combination

with 2-gang insert: 2 status LEDs

2 orientation LEDs

Operating elements

Push-button module, 1-gang:

2 push-buttons

Push-button module,

2-gang: Connection: 4 push-buttons module interface with

8 contact pins

Schneider Electric GmbH c/o Merten

Gothaer Straße 29, 40880 Ratingen

www.merten.com

www.merten-austria.at

Customer care centre:

Phone: +49 2102 - 404 6000